



1850563


Empress Vanity

Parts and Hardware List


A.	Top Assembly	1 pc
B.	Posts	4 pcs
C.	Bottom Connector	1 pc
D.	Feet	4 pcs
E.	Mirror Saddle	1 pc
F.	Mirror	1 pc
G.	Cast Dutch Screws	2 pcs
H.	Lock Washers	4 pcs
I.	Flat Washers	4 pcs
J.	Rubber Washers	4 pcs
K.	Long Allen Head Bolts	2 pcs
L.	Short Allen Head Bolts	2 pcs
M.	Allen Head Wrench	1 pc

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * Use the hardware illustrations to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.


Hardware Illustrations




G. Cast Dutch Screw




H. Lock Washer




I. Flat Washer



J. Rubber Washer



K. Long Allen Head Bolt



L. Short Allen Head Bolt



1850563

Empress Vanity

Attach Spindles, Bottom Connector & Feet

Parts required

A. Top Assembly	1 pc	C. Bottom Connector	1 pc
B. Posts	4 pcs	D. Feet	4 pcs

1. **Attach Posts (B)** Place Top Assembly (A) upside down on a soft surface. Align the exposed threads of the Posts (B) with the pre-threaded holes in the bottom of the Top Assembly (A). Tighten by turning in a clockwise direction. See Illustration #1.
2. **Attach Bottom Connector (C) & Feet (D)** Align the pre-drilled holes in the Bottom Connector (C) with pre-threaded holes in the Posts (B). Insert the exposed threads of the Feet (D) through the pre-drilled holes in the Bottom Connector (C) and into the pre-threaded holes in the Posts (B). Tighten by turning in a clockwise direction. See Illustration #1.

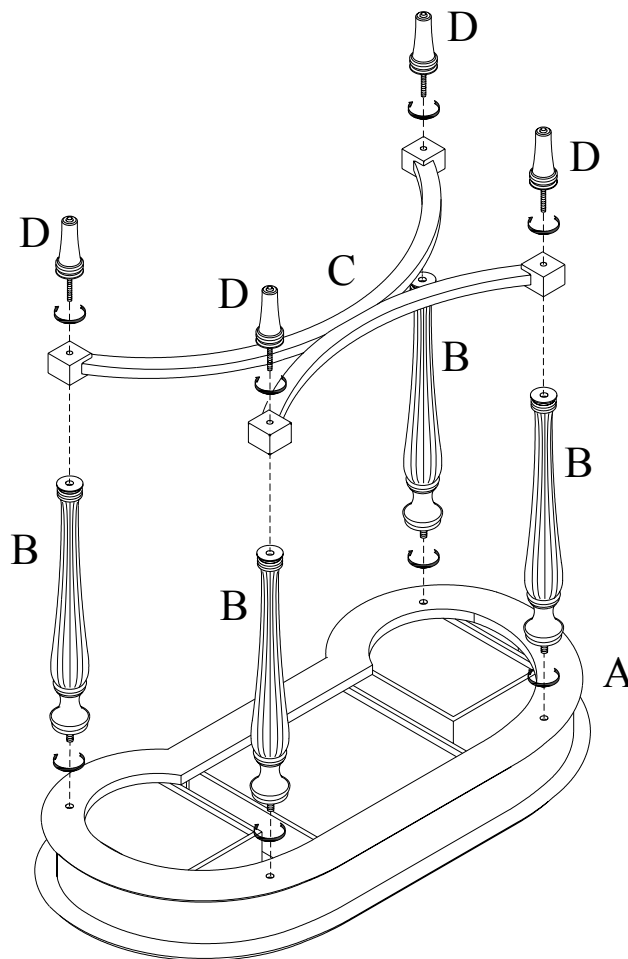


Illustration # 1

Attach Mirror & Mirror Saddle



1850563

Empress Vanity

Parts required

A.	Top Assembly	1 pc	I.	Flat Washers	4 pcs
E.	Mirror Saddle	1 pc	J.	Rubber Washers	4 pcs
F.	Mirror	1 pc	K.	Long Allen Head Bolts	2 pcs
G.	Cast Dutch Screws	2 pcs	L.	Short Allen Head Bolts	2 pcs
H.	Lock Washers	4 pcs	M.	Allen Head Wrench	1 pc

3. **Attach Mirror Saddle (E)** Turn the partially assembled piece upright and pull the drawers half-way out. Align the pre-threaded holes in the Mirror Saddle (E) with the pre-drilled holes in the Top Assembly (A). Secure with Lock Washers (H), Flat Washers (I) and Long Allen Head Bolts (K) in the two middle holes and Short Allen Head Bolts (L) in the two outside holes using Allen Head Wrench (M). See Illustration #2.

4. **Attach Mirror (F)** Align the pre-threaded holes in the Mirror (F) with the pre-drilled holes in the Mirror Saddle (E). Place one Rubber Washer (J) over the exposed thread of a Cast Dutch Screw (G) and insert through the pre-drilled hole of the Mirror Saddle (E). Repeat for other side. Carefully align the pre-threaded holes of the Mirror Saddle (E) with the threads of the Cast Dutch Screws (G) and tighten by turning in a clockwise direction. See Illustration #2.

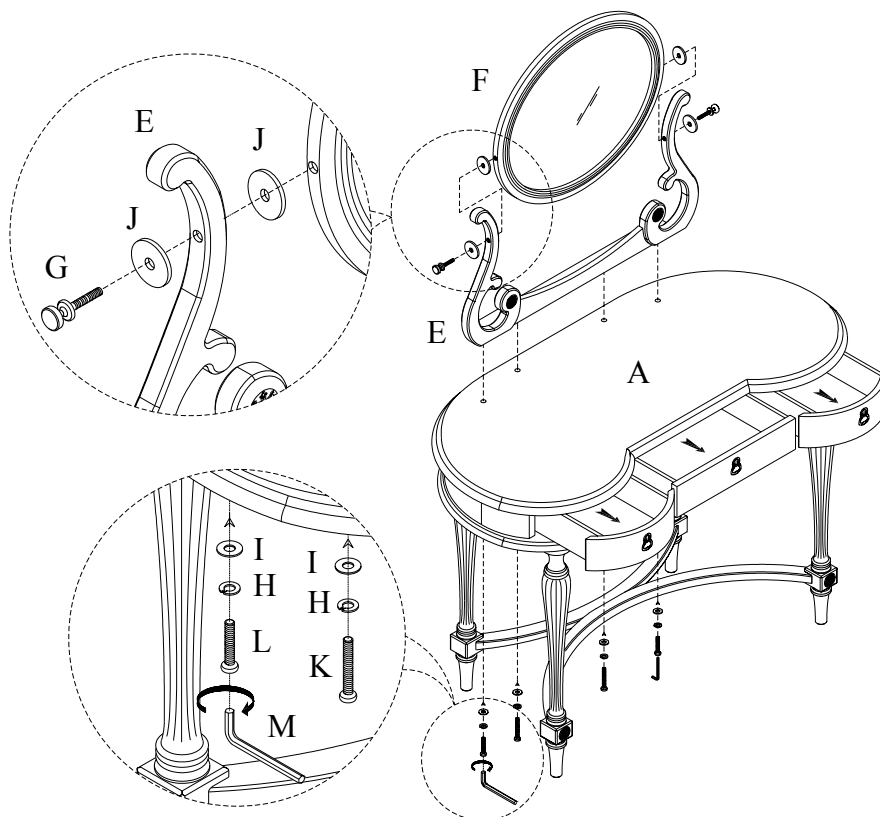


Illustration # 2